



India Mark II Cylinder Replacement

Prerequisite guide for accessing the valves in the cylinder.

Written By: Andrew Optimus Goldberg



INTRODUCTION

Prereq only.

Step 1 — Cylinder



- ❗ The last section of riser main pipe will have the pump cylinder attached to the bottom.
- Pull the assembly of riser main pipe and cylinder out of the well and set the assembly on a block of wood to keep the cylinder off the ground.

Step 2



- Using two pipe wrenches, unscrew the cylinder from the riser main.

Step 3



- Slowly pull the cylinder off of the pump rod, exposing the traveling valve and foot valve.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 02:54:59 PM.